



User Instructions



Product Name: MICROBLOC

6ft Webbing Self-Retracting Lifeline

Part Number: AN175W / AN176WW

Do not throw away these instructions !

Read and understand these instructions before using equipment !

Table of Contents

Introduction	1-2
Applicable Safety Standards	2
Worker Classifications	2
Safety Information	3-4
Maintenance, Cleaning, and Storage	5
Inspection	5
Product Specific Applications	6
Limitations	7-9
Components and Specifications	10
Installation and Use	11
Labels and Inspection	12

Introduction

Thank you for purchasing a DELTA PLUS GROUP - MICROBLOC. This manual must be read and understood in its entirety, and used as part of an employee training program as required by OSHA or any applicable state agency.

 
This and any other included instructions must be made available to the user of the equipment. The user must understand how to safely and effectively use the MICROBLOC, and all fall safety equipment used in combination with the MICROBLOC.

User Information	
Date of First Use:	_____
Serial #:	_____
Trainer:	_____
User:	_____

Applicable Safety Standards

When used according to instruction specifications, this product meets or exceeds all applicable ANSI Z359.14-2014 standards for fall protection. Applicable standards and regulations depend on the type of work being done, and also might include state regulations if applicable. Consult regulatory agencies for more information on personal fall arrest systems and associated components.

Worker Classifications



Qualified Person: A person with an accredited degree or certification, and with extensive experience or sufficient professional standing, who is considered proficient in planning and reviewing the conformity of fall protection and rescue systems.

Competent Person: A highly trained and experienced person who is ASSIGNED BY THE EMPLOYER to be responsible for all elements of a fall safety program, including, but not limited to, its regulation, management, and application. A person who is proficient in identifying existing and predictable fall hazards, and who has the authority to stop work in order to eliminate hazards.

Authorized Person: A person who is assigned by their employer to work around or be subject to potential or existing fall hazards.

It is the responsibility of a Qualified or Competent person to supervise the job site and ensure all applicable safety regulations are complied with.

Safety Information



Failure to understand and comply with safety regulations may result in serious injury or death. Regulations included herein are not all-inclusive, are for reference only, and are not intended to replace a Competent Person's judgment or knowledge of federal or state standards.

Do not alter equipment.

Do not misuse equipment.

Workplace conditions, including, but not limited to, flame, corrosive chemicals, electrical shock, sharp objects, machinery, abrasive substances, weather conditions, and uneven surfaces, must be assessed by a Competent Person before fall protection equipment is selected.

The analysis of the workplace must anticipate where workers will be performing their duties, the routes they will take to reach their work, and the potential and existing fall hazards they may be exposed to.

Fall protection equipment must be chosen by a Competent Person. Selections must account for all potential hazardous workplace conditions.

All fall protection equipment should be purchased new and in an unused condition.

Fall protection systems must be selected and installed under the supervision of a Competent Person, and used in a compliant manner.

Fall protection systems must be designed in a manner compliant with all federal, state, and safety regulations.

Unless explicitly stated otherwise, the maximum allowable free fall distance for lanyards must not exceed 6'. No free fall allowed for non-LE SRLs. SRLs must arrest falls within 54".

Forces applied to anchors must be calculated by a Competent Person.

Harnesses and connectors selected must be compliant with manufacturer's instructions, and must be of compatible size and configuration.

A pre-planned rescue procedure in the case of a fall is required. The rescue plan must be project-specific. The rescue plan must allow for employees to rescue themselves, or provide an alternative means for their prompt rescue.

Store rescue equipment in an easily accessible and clearly marked area.

Training of Authorized Persons to correctly erect, disassemble, inspect, maintain, store, and use equipment must be provided by a Competent Person.

Training must include the ability to recognize fall hazards, minimize the likelihood of fall hazards, and the correct use of personal fall arrest systems.

NEVER use fall protection equipment of any kind to hang, lift, support, or hoist tools or equipment, unless explicitly certified for such use.

Maintenance of equipment must be done according to manufacturer's instructions. Equipment instructions must be retained for reference.

Prior to EACH use, all equipment in a fall protection system must be inspected for any potential or existing deficiencies that may result in its failure or reduced functionality. IMMEDIATELY remove equipment from service if any deficiencies are found.

Equipment must be inspected by a Competent Person at least every six months. These inspections must be documented in equipment instruction manual and on equipment inspection grid label.

Equipment must be inspected for defects, including, but not limited to, the absence of required labels or markings, improper form/fit/function, evidence of cracks, sharp edges, deformation, corrosion, excessive heating, alteration, excessive wear, fraying, knotting, abrasion, and absence of parts.

Equipment that fails inspection in any way must immediately be removed from use, or repaired by an entity approved by the manufacturer.

No on-site repair of equipment unless explicitly permitted by DELTA PLUS GROUP.

Equipment subjected to forces of fall arrest must immediately be removed from use.

Snap hooks, carabiners, and other connectors must be selected and applied in a compatible fashion. All risk of disengagement must be eliminated. All snap hooks and carabiners must be self-locking and self-closing, and must never be connected to each other.

Age, fitness, and health conditions can seriously affect the worker should a fall occur. Consult a doctor if there is any reason to doubt a user's ability to withstand and safely absorb fall arrest forces or perform set-up of equipment.

Pregnant women and minors must not use this equipment.

Physical harm may still occur even if fall safety equipment functions correctly. Sustained post-fall suspension may result in serious injury or death. Use trauma relief straps to reduce the effects of suspension trauma.

Allowable individual worker weight limit (including all equipment), unless explicitly stated otherwise, is 130-310 lbs.

Maintenance, Cleaning, and Storage

Repairs to MICROBLOC can only be made by a DELTA PLUS GROUP representative or an entity authorized by DELTA PLUS GROUP. If a MICROBLOC fails inspection in any way, immediately remove it from service, and contact DELTA PLUS GROUP to inquire about its return or repair.

Cleaning after use is important for maintaining the safety and longevity of MICROBLOC. Remove all dirt, corrosives, and contaminants from MICROBLOC before and after each use. If a MICROBLOC cannot be cleaned with plain water, use mild soap and water, then rinse and wipe dry. NEVER clean MICROBLOC with corrosive substances.

When not in use, store equipment where it will not be affected by heat, light, excessive moisture, chemicals, or other degrading elements.

Inspection

KEEP INSTRUCTIONS AVAILABLE FOR REFERENCE. Record Date of First Use.

Prior to EACH use, inspect MICROBLOC for deficiencies, including, but not limited to, corrosion, deformation, pits, burrs, rough surfaces, sharp edges, cracking, rust, paint buildup, excessive heating, alteration, broken stitching, fraying, bird-caging, and missing or illegible labels. IMMEDIATELY remove MICROBLOC from service if defects or damage are found, or if exposed to forces of fall arrest.

Ensure that applicable work area is free of all damage, including, but not limited to, debris, rot, rust, decay, cracking, and hazardous materials. Ensure that selected work area will support the application-specific minimum loads set forth in this instruction manual. Work area MUST be stable.

At least every 6 months, a Competent Person other than the user must inspect MICROBLOC. Competent Person inspections MUST be recorded in inspection log in instruction manual and on equipment inspection grid label. The Competent Person must sign their initials in the box corresponding to the month and year the inspection took place.

During inspection, consider all applications and hazards MICROBLOC have been subjected to.



Use of equipment in unintended applications may result in serious injury or death. Maximum 1 attachment per connection point.



Personal Fall Arrest: MICROBLOC may be used in Personal Fall Arrest applications to support a MAXIMUM 1 Personal Fall Arrest System (PFAS). Structure must withstand loads applied in the directions permitted by the system of at least 5,000 lbs. No free fall is permitted. SRL must always be positioned at or above harness dorsal D-ring AND at or below anchor point. Applicable D-ring: Dorsal.



Restraint: MICROBLOC may be used in Restraint applications. Restraint systems prevent workers from reaching the leading edge of a fall hazard. Always account for fully deployed length of lanyard/SRL. Structure must withstand loads applied in the directions permitted by the system of at least 1,000 lbs. No free fall is permitted. Restraint systems may only be used on surfaces with slopes up to 4/12 (vertical/horizontal). Applicable D-rings: Dorsal, Chest, Side, Shoulder.

For all applications: worker weight capacity range (including all clothing, tools, and equipment) is 130-310 lbs., *or up to 420 lbs. if used in combination with equipment explicitly certified for such use.


***Each individual component of PFAS (including harness and anchorage connector) must be rated for up to 420 lbs.**



Limitations

Fall Clearance: There must be sufficient clearance below the anchorage connector to arrest a fall before the user strikes the ground or an obstruction. When calculating fall clearance, account for a **MINIMUM 3'** safety factor, deceleration distance, user height, length of lanyard/SRL, and all other applicable factors. **Diagram shown is an example fall clearance calculation ONLY.**

FALL CLEARANCE CALCULATION

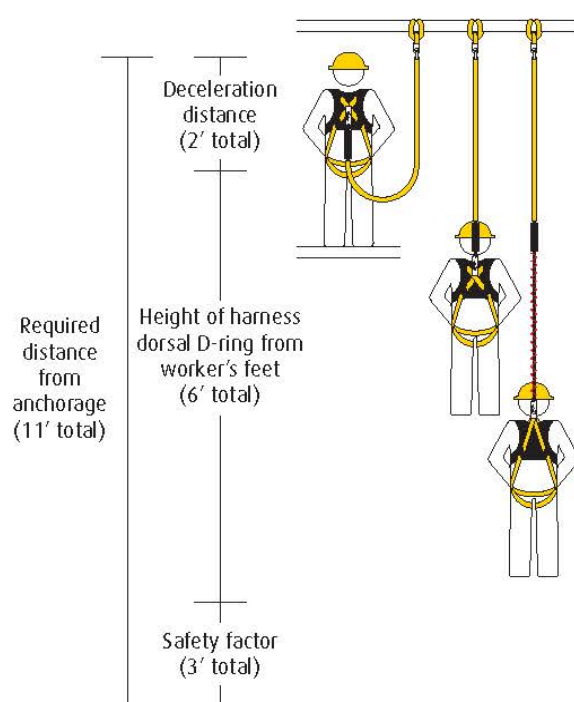

Swing Falls: Prior to installation or use, make considerations for eliminating or minimizing all swing fall hazards. Swing falls occur when the anchor is not directly above the location where a fall occurs. Always work as close to in line with the anchor point as possible. Swing falls significantly increase the likelihood of serious injury or death in the event of a fall.

Environmental hazards: This equipment is to be used only under the direct supervision of a competent person who is able to identify hazards that must be avoided, including electricity and chemicals, machinery or other moving objects, sharp edges, damaged anchorages or structures, or any other workplace element that could damage this equipment or prevent it from operating as intended.

Components / Subsystems: Before first use, a qualified person should inspect all components and ensure subsystems are compatible and will perform correctly when combined into a complete personal fall protection system. Consult the information in these instructions, and if any additional information is needed, contact DELTA PLUS GROUP directly.

Compatibility: When making connections with MICROBLOC, eliminate all possibility of roll-out. Roll-out occurs when interference between a hook and the attachment point causes the hook gate to unintentionally open and release. All connections must be selected and deemed compatible with MICROBLOC by a Competent Person. All connector gates must be self-closing and self-locking, and withstand minimum loads of 3,600 lbs. See the following for examples of compatible/incompatible connections:

Connector closed and locked to D-ring. **OK.**



Connector to integral lanyard. **NO.**

Two or more snap hooks or carabiners connected to each other. **NO.**



Connector directly to webbing. **NO.**

Two connectors to same D-ring. **NO.**



Application that places load on gate. **NO.**

Incompatible or irregular application, which may increase risk of roll-out. **NO.**




Connector directly to horizontal lifeline. **NO.**

Correct Anchorage Positioning:

This chart details allowable working zones required to reduce risk of swing falls and improper side loading. ALWAYS adhere to information specified by chart.

Anchor Distance From Leading Edge (Y)	Working Distance Along Roof Edge (Either Direction) (X)	Working Angle From Perpendicular (ϕ)
6'	8'	53°
10'	9'-9"	45°
15'	11'-7"	38°
20'	13'-3"	33°
25'	14'-6"	30°
30'	16'	28°
35'	17'-2"	26°
40'	18'-3"	24°
45'	19'-4"	23°
50'	19'-10"	21°
55'	21'-4"	21°
60'	22'-3"	21°

For example, if the anchorage connector is 6' from the leading edge (Y), the working distance (X) is 8' in each direction from the perpendicular, which translates to a 53° working angle.

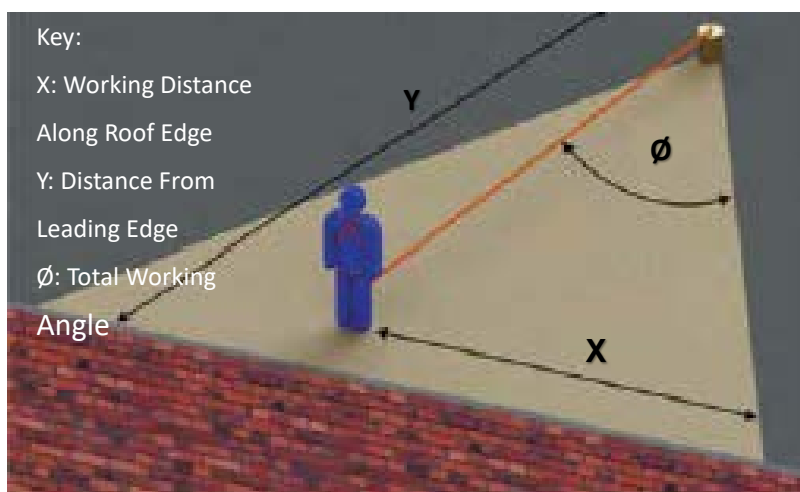

Components and Specifications


Materials: stainless steel, aluminum, glass-filled nylon, and polyester.

Class A SRL

Average arrest force: 1,350 lbs.

Maximum arrest force: 1,800 lbs.

Maximum deceleration distance: 24".

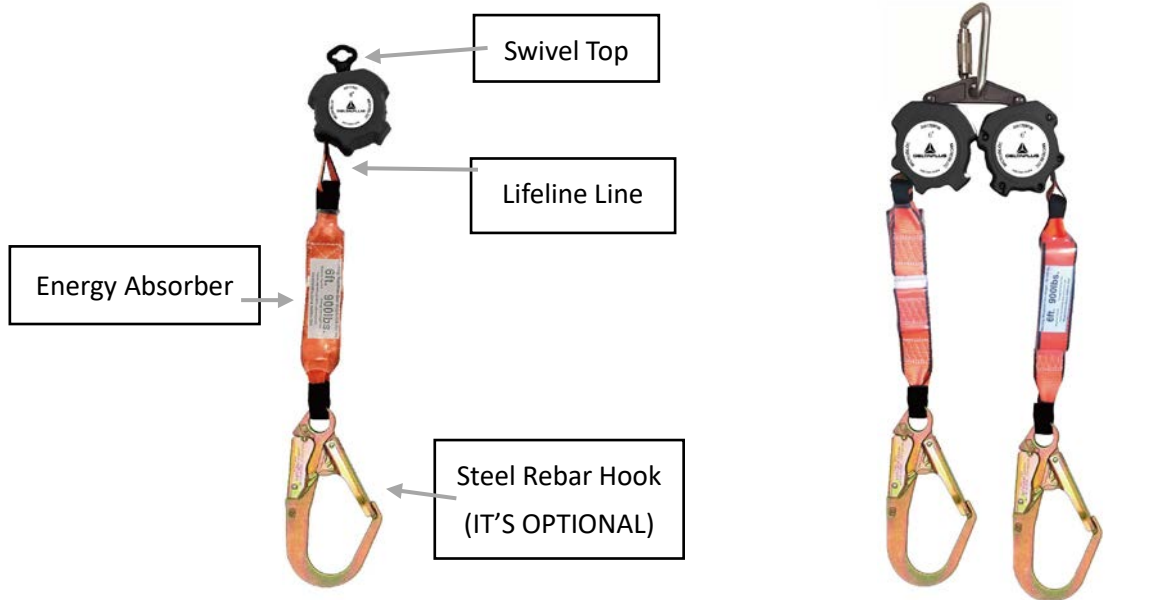

Twin-leg MICROBLOC

Part No.	Description
AN175W	MICROBLOC 6' Single-leg SRL w/Steel Rebar Hook
AN176WW	MICROBLOC 6' Twin-leg SRL w/Steel Rebar Hook

Certified to meet ANSI Z359.14-2014 Standards and regulations for the Self-Retracting Lifeline component of a complete personal fall arrest system.

Installation and Use

DELTA PLUS GROUP-MICROBLOC MUST NEVER be used in Leading Edge (LE) applications.

No free fall is allowed.

ALWAYS avoid lifeline contact with sharp or abrasive edges and surfaces.

For Twin-Leg Kits, assemble SRL according to instruction sheet provided with the Connector.

1. All components of the personal fall arrest system must be selected and deemed compatible with MICROBLOC by a Competent Person.
2. Ensure structure to which MICROBLOC is to be attached, and on which work is to be performed, is free of all hazards, including, but not limited to, debris, rot, rust, sharp or abrasive edges and surfaces, and hazardous materials.
3. MICROBLOC may be used in either mobile or stationary applications. SRL must always be positioned at or above harness dorsal D-ring AND at or below anchor point.
4. If using MICROBLOC with rebar hook configuration, SRL carabiner must ALWAYS be attached to harness dorsal D-ring, and rebar hook must ALWAYS be connected to compatible structural rebar.
5. For stationary applications, attach MICROBLOC carabiner to selected anchorage connector, and attach snap hook to applicable harness D-ring.
6. For mobile applications, attach MICROBLOC carabiner to harness Dorsal D-ring, and attach snap hook to selected anchorage connector.
7. If using twin leg MICROBLOC, ensure 100% tie-off will be maintained at all times; ALWAYS attach disengaged snap hook or rebar hook to a compatible anchorage connector prior to unhooking engaged snap hook or rebar hook.



Single-leg




Twin-leg


Labels



Front Side
(single leg)

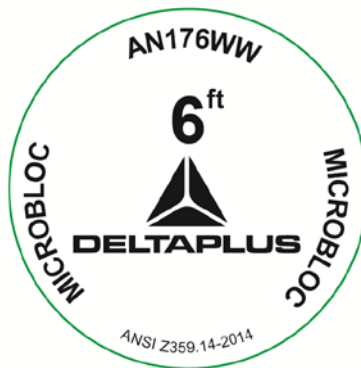

Front Side
(twin leg)

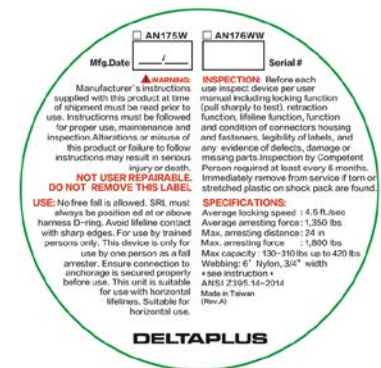

Back Side

Inspection Log

User must inspect prior to EACH use. Competent Person other than user must complete formal inspection at least every 6 months. Competent Person to inspect and initial.

Date of First Use: _____. Product lifetime is 5 years from Date of First Use, or, if not recorded, from Date of Manufacture, as long as it passes pre-use and Competent Person inspections.

This inspection log must be specific to one MICROBLOC. Separate inspection logs must be used for each MICROBLOC. All inspection records must be made visible and available to all users at all times.

	J	F	M	A	M	J	J	A	S	O	N	D
YEAR												
YEAR												
YEAR												
YEAR												
YEAR												

If equipment fails inspection IMMEDIATELY REMOVE FROM SERVICE.